

Flushing Tankless Procedures

Annual flushing is recommended

Steps on how to flush:

- 1. Turn off the water heater
- 2. Disconnect the power supply
- 3. Close "C" and "D" valves
- 4. Connect one hose to "A" valve and place the free end in the bucket
- 5. Connect one of the hoses to the circulation pump outlet and the cold water line at the "B" valve
- 6. Connect one hose to the circulation pump inlet and place the free end in the bucket
- 7. Pour the cleaning solution into the bucket
- 8. Open both "A" and "B" valves
- 9. Turn on the circulation pump and allow the solution to circulate through the water heater for at least 45 minutes
- 10. Rinse the cleaning solution from water heater
- 11. Disconnect all tubes
- 12. Remove the cold water inlet filter from water heater and clean out any residue
- 13. Reinsert filter and ensure the filter cap is securely tightened
- 14. Reconnect the power supply to water heater
- 15. Turn on the water heater

The PeakFlowE™ Anti-Scale system helps prevent scale build up, lengthening the time between required flushing



